


ASSEMBLY INSTRUCTIONS FOR CDL VACUUM SENSORS

* 5/16" detachable unions are no longer included with the sensor. See step 2.
Please see product code #21055 (Male) and #21056 (Female) if necessary.

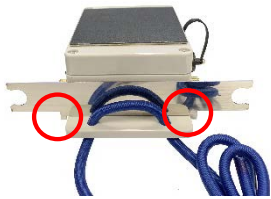


STEP 1

Fix the silver holder on top of the sensor as shown in the picture. Make sure that the adhesive side is facing the sensor. Use the notches to perfectly center the holder.




STEP 2

Take a black antenna and screw in using the gold screw on the side of the sensor. Repeat the step for the second antenna on the other side.

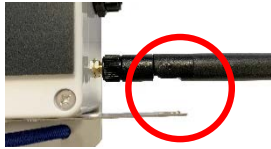

STEP 3

When you position the antennas, make sure that the antenna hinge is facing the silver holder as shown in the picture.

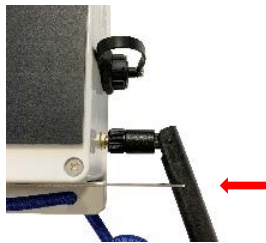

STEP 4

Position the antennas in the circular notches of the silver holder by applying a force at the point indicated by the red arrow. Do not take the antennas at the end because it will damage it.



STEP 5

Make sure that the antennas are well placed in the circular notches.

STEP 6

Enjoy your CDL Monitoring System!

For more information or support, contact your CDL sales representative or regional service technician.